


CANTCU - MaxxECU integration v1.0

 
- **CAN Speed** is configurable
- CAN2.0B, Standard 11bit identifiers
- All 16 bit values are **Little Endian**

MaxxECU Configuration

- **Default CAN output protocol v1.3** needs to be activated, and **User Channel 9** needs to be configured to send **Adjusted VE**.

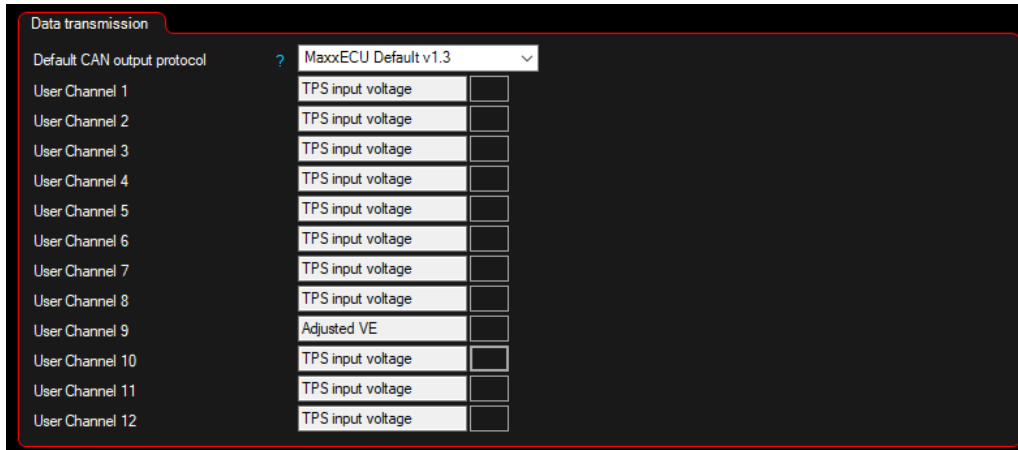

- **External gearbox controller** needs to be selected in the **CAN Powertrain controls**.



Available Realtime-values in CANTCU (sent from MaxxECU)

- *Engine RPM*
- *TPS Value*
- *Engine MAP*
- *Wheel Speeds*
- *Brake Switch*
- *Coolant Temperature*
- *Engine Oil Temperature*

Available Realtime-values in MaxxECU (sent from CANTCU)

- *VSS Gear*
- *Gearbox Mode*
- *Gearbox Oil Temp*
- *Gearbox Calc Engine Torque*
- *Gearbox Engine Target Torque*
- *Shiftcut 0/1*
- *Blip 0/1*
- *Clutch Slip %*

Extra values sent on the CAN-bus from CANTCU to aid configuration:

Rate	CAN ID	Type	Offset	Realtime variable	Unit	Factor
50 Hz	0x606	UINT16	0	TCU RPM Target	RPM	1
50 Hz	0x606	UINT8	16	TCU Cut %	%	1
50 Hz	0x606	UINT8	24	TCU Blip %	%	1
50 Hz	0x606	INT16	32	TCU Delta TQ	Nm	1
50 Hz	0x606	UINT16	48	TCU Delta RPM	RPM	1
10 Hz	0x607	UINT8	0	TCU Auto/Manual		1
10 Hz	0x607	UINT8	8	TCU DL/DriveMode		1
10 Hz	0x607		16-63	RESERVED		

CAN-ID 0x606h

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 7	TCU Delta RPM							
Byte 6								
Byte 5	TCU Delta TQ							
Byte 4								
Byte 3	TCU Blip %							
Byte 2	TCU Cut %							
Byte 1	TCU RPM Target							
Byte 0								

CAN-ID 0x607h

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 7	-	-	-	-	-	-	-	-
Byte 6	-	-	-	-	-	-	-	-
Byte 5	-	-	-	-	-	-	-	-
Byte 4	-	-	-	-	-	-	-	-
Byte 3	-	-	-	-	-	-	-	-
Byte 2	-	-	-	-	-	-	-	-
Byte 1	TCU DL/DriveMode							
Byte 0	TCU Auto/Manual							

Configuring Extra Values (CAN Inputs)

Extra values sent from CANTCU can be imported into MaxxECU by using the **CAN Inputs**. All the parameters needed for successful configuration of the extra values can be found in the tables in this document.

An example of configuring the extra value **Cut %** on a **CAN Input**:

CAN input value 5

CAN input value 5

Enable: Enable, CAN Message Input

CAN Bus: CAN 1

CAN Message ID: 0x606

Timeout

Timeout: Disabled

Data

ByteOffset: 2

Endian: Little endian

Type: unsigned 8 bit

Mask: 0

Value conversion (analog)

Offset: 0

Multiplier: 1

Divider: 1

Resolution: 1 (-32768 to 32767)

Value = Resolution*(Indata+Offset)*Multiplier/Divider

Value usage (analog)

Name: CT Cut %

Unit: %


Destination: Not used

Current value: **Disconnected**

Tuning - Shiftcut

There are several ways of achieving a proper shiftcut. By default, CANTCU sends a shiftcut request (0/1) to MaxxECU **Shiftcut Input**. This request can be combined with the various extra values available like **Cut %**, **Delta TQ**, **Delta RPM**, **Drive Mode** etc. to get a nice and versatile cut that works optimally in every situation.

- MaxxECU **Shiftcut Mode** must be configured as *"Input Controlled"* to let CANTCU decide the duration of the cuts.
- Cut should be enabled also without throttle input and without any delays

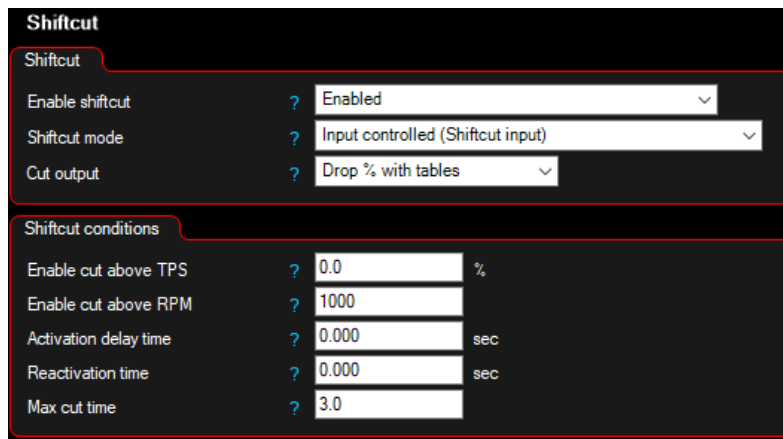

Example configuration using F-Series DCT with cuts based on **Cut %** and **DriveLogic Level** from **CAN Inputs**

Tuning - Blips

There are many strategies available for blipping the throttle. The best way to achieve sophisticated and optimally targeted blips is to continuously vary the throttle position throughout the blip process. This functionality can be achieved in MaxxECU by using a custom blip process instead of the default built-in function (Motorsport->Throttle Blip). For the custom blip process, a **User Table** and some extra values from CANTCU assigned to **CAN inputs** are needed.

To be able to do blips without the MaxxECU default blip function, the **Overrun Cut** (if enabled) needs to be configured to deactivate overrun fuel cut during CANTCU blip requests. This can be done by adding a table to the function, and defining the **Overrun deactivation RPM** to be higher than the maximum blip RPM (e.g. 6000RPM) when CANTCU blip request (CAN input value=2) is active. The other parameters like **Activation delay** and **Cut Ramp In/Out Times** may need some tweaking, but a configuration similar to the one below should provide a good starting point.

User CANT / CT - CntBlip {}	RPM
2	6000
0	1500

A free **User Table** needs to be enabled. The **User Table** settings can be configured freely. Using smoothing can help calm down throttle control oscillations if needed.

Enable	Enabled
Name	Blip RPM DCT
Unit	%
Resolution	0.1 (-3276.8 to 3276.7)
Smoothing	Enabled
Smoothing Alpha	30.0 %
Use as analog input function	Not used as AIN

The **User Table** output is a percentage added to throttle position depending on various user-definable inputs. **Delta TQ** or **Delta RPM** combined with **Engine RPM** have been proven to work nicely, but basically any combination can be used, thanks to the freely configurable axes.

User table 3		(output value)			
User CAN20 [Delta TQ] (Nm) [Interpolated]	400	12.0	15.0	15.0	14.0
	300	10.0	13.0	13.0	14.0
	200	8.0	13.0	13.0	14.0
	100	8.0	12.0	11.0	13.0
	40	8.0	10.0	11.0	13.0
	0	0.0	0.0	0.0	0.0
-100	0.0	0.0	0.0	0.0	
		1500	3000	4500	6000
		(Interpolated) RPM (rpm)			

4D Axis: 2
(Step mode): 0

To activate the blip function, the **User Table** created earlier is added to **Main Throttle Target** (E-Throttle -> Throttle Targets).

Main throttle target		Throttle target position (%)							
Main pedal position [%] [Interpolated]	100.0	100.0	100.0	100.0	100.0	100.0	100.0	100.0	100.0
	72.0	76.7	79.0	81.2	83.4	85.7	85.7	85.7	85.7
	65.0	53.3	57.8	62.4	66.9	71.4	71.4	71.4	71.4
	57.1	30.0	36.8	43.5	50.3	57.1	57.1	57.1	57.1
	50.0	22.5	27.6	32.7	37.8	42.9	42.9	42.9	42.9
	38.0	10.0	13.4	21.8	25.2	28.6	28.6	28.6	28.6
	25.0	3.5	7.2	10.9	12.6	14.3	14.3	14.3	14.3
	6.0	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5
	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
		1000	2000	3000	4000	5000	6000	7000	8000
		(Interpolated) RPM (rpm)							

Extra adjustments

- Apply idle control: Enabled
- Multiply throttle by table %: Disabled
- Add table to throttle %: User table 3

NOTE!

All tuning should always be done by a professional in safe environment (track/dyno)

Before activating the blip function, it's recommended to test downshifting and verify (realtime or logging) that the user table is behaving correctly during the blip. Starting values for tuning the blip should be low and gradually increased to avoid overrevving and undesired behavior/acceleration during the shift.